

## MAINTENANCE

The installation must be inspected and tested annually by a registered person (see item a) on page 2) and any servicing and cleaning identified carried out. Servicing and removal of the main cover must only be performed by an approved fitter or the manufacturer.

The heater should not be left for long periods without use. It is advisable to run the unit for short periods throughout the summer.

The exhaust and inlet pipes should be inspected periodically for damage and any build-up of dirt around the ends. Clean or replace as necessary.


The heater, its gas supply, and flues for the products of combustion are to be inspected in accordance with national regulations or if these do not exist, the manufacturer's recommendations, however, it is advised that this should be done at least annually.

## LOCKOUTS

### Lockout Clearing Procedure

The lockout must be cleared by turning the 'Fan Only' setting on the control panel, 'on', 'off' and 'on' again within 2.5 seconds. If the first lockout reset attempt is unsuccessful, you can retry an additional 4 times. If the lockout still will not clear (identified by a solid LED), please turn off the heater, check the heater for faults, power up the heater and then further lockout reset attempts can be made.

	Nominal Heat Input ( $Q_n$ ) 2.90 kW
	Consumption (M) 208g/h
	Voltage: 12 V d.c. 2.2A
Type C <sub>53</sub>	
PI No. 86CS07	
Gas Category & Pressure	Countries of Destination:
CAT I <sub>3B/P (30)</sub> Butane/Propane 30m/bar	AT, BE, BG, CY, CZ, DE, DK, EE, FI, FR, GB, GR, HU, HR, IS, IT, LT, LU, LV, MT, NL, NO, SE, SI, SK & TR.
CAT I <sub>3+ (28-30/37)</sub> Butane 28-30m/bar	BE, CH, CY, CZ, ES, GB, GR, IE, IT, LT, LU, PT, SI, SK & TR.
CAT I <sub>3p (37)</sub> Propane 37m/bar	BE, CH, ES, FR, GB, IE & PT FR, GB, GR, HU, HR, IS, IT, LT, LU, LV, MT, NL, NO, SE, SI, SK & TR.



Manufactured By: Munster Simms Engineering  
Distributed by: PROPEX HEATING & LEISURE LTD  
Unit 10, Carvers Industrial Estate,  
Ringwood, Hampshire. BH24 1JS



180.122\_0418

Tel: +44 (0)333 0110 488  
Website: [www.propexheatsource.co.uk](http://www.propexheatsource.co.uk)  
Email: [info@propexheatsource.co.uk](mailto:info@propexheatsource.co.uk)

Issue 6L



## Heatsource HS2800 Heater



Vehicle  
Installation  
&  
Operation Instructions  
From April 2018

ENGINEERED FOR  
COMFORT & RELIABILITY

## SAFETY WARNINGS & GENERAL INFORMATION

The Heatsource HS2800 is intended for use only as a space heater in caravans, motor caravans, mobile homes/units.

- a) Installation and servicing of this appliance must only be carried out by persons registered with the Gas Safety Register (GB), or the relevant national organisation, in accordance with the relevant regulatory and safety requirements.
- b) Heater installations must comply with the current European standards for Motorhomes / Caravans.
- c) This heater is not suitable for installation on the outside of the vehicle.
- d) The heater must not be operated when refueling: the vehicle, towing vehicle, other appliances or when the vehicle is in a confined space, such as a garage.
- e) The exhaust gas outlet must not be fitted on the entry door nor in any position where combustion products may enter the interior.
- f) The heater is designed to operate on Propane or Butane. Under no circumstances should an adjustable regulator be used.
- g) Do not allow materials to come into direct contact with the heater. Under no circumstances must the re-circulation air inlet be covered or obstructed at any time.
- h) The Heatsource HS2800 heater has a type C<sub>53</sub> flue, and has been tested and passed the relevant sections of the following standards:  
 Gas Appliance Regulation (EU) 2016/426 on the approximation of the laws of the Member States relating to appliances burning gaseous fuels.  
 Low Voltage Directive 2014/35/EU on the harmonization of the laws of the Member States relating to electrical equipment designed for use within certain voltage limits.  
 Electromagnetic Compatibility Directive 2014/30/EU, on the approximation of the laws of the Member States relating to electromagnetic compatibility.  
 Automotive EMC Directive 2004/104/EC (latest amendment 2009/19/EC) as per regulation 10.05  
 CE mark first affixed: **November 2009**  
 This product complies with all relevant European directives and standards. Please contact Propex if further details are required.
- i) A data label is situated adjacent to the gas inlet.
- j) The gas supply line should be checked regularly for damage or leaks and tested under pressure with a proprietary leak tester. **NEVER TEST FOR GAS LEAKS WITH NAKED FLAME.** If a gas leak is detected or smelt, turn off gas at the bottle immediately and ventilate the area. Contact a registered installer (see a) above) to rectify the problem.

**IMPORTANT: Do not direct the combustion products outlet terminal (exhaust flue) towards the combustion air inlet terminal.**

- k) For this appliance in Europe the standard is BS EN 1949:2011 (Specification for the installation of LPG systems for habitable purposes in leisure accommodation vehicles and in other road vehicles).

## FAULT FINDING

The Heatsource HS2800 is equipped with an electronic diagnostic system which will detect fault conditions ranging from poor gas or electricity supply to internal heater malfunctions. In the event of a failure the red light on the thermostat (or timer control) will flash a certain amount of times, pause, and repeat until switched off. Count the amount of flashes and refer to the table below.

### Overheat Cut-Out.

The HS2800 is equipped with an automatic resetting thermal cut-out (in addition to the electronic cut-out). If the heater reaches an unusually high temperature during operation the cut-out will disengage the gas solenoid valve. The operation of this cut-out could be caused by either a restricted hot air outlet or air inlet, or the heater being switched off by a battery isolating switch depriving it of its purge cycle, the fault code is 2 flashes.

## FAULT FINDING TABLE

Number of flashes	Fault	Remedy
1	Flame failure	Check gas supply making sure there is gas in the bottle and no blockage in the gas line. Ensure propane is used at temperatures below +5°C. Clear lockout as described on page 8.
2	Overheat fault	Check the air ducts and vents are not blocked or restricted. Propex recommends that you wait at least 5 to 10 minutes to allow the heater to cool before clearing lockout as described on page 8.
3	Low/ high voltage	Minimum operating voltage is 10v and max operating voltage is 15v (for 12v heaters) when measured at the heater. Check battery voltage. If above 10v, check connections between heater and battery. Check alternator or external battery charging. Clear lockout as described on page 8.
4	Combustion air fault	Check combustion air inlet flue and exhaust flue for blockages. Clear lockout as described on page 8.
5	Other / internal fault	Attempt to clear lockout as described on page 8. If this fails, contact Propex.
Solid	General	Two faults have occurred at the same time OR more than 5 lockout clearing attempts have been unsuccessful. Clear lockout as described on page 8.
No flashing	PCB not powered up	Check the supply to the heater as above. Otherwise contact Propex

- d) Find suitable locations for the hot air outlet and re-circulation air inlet vent and drill a 5mm pilot hole through each centre. Using a 95mm hole saw, drill out the holes and fix the vents in position using the black 1/2 x No.8 counter sunk self tapping screws provided.
- e) Fix the 76mm reducer (push fit) into the back of the hot air outlet. Cut the 76mm ducting to length and fix to the heater and the outlet using the hose clips provided.

NOTE: There is no reducing spigot provided for the air inlet vent, as it is not necessary to put ducting on it.

- f) A 0.75 metre length of 26mm flexible stainless steel tubing with a special end cap is supplied for ducting the products of combustion away to the edge of the vehicle. The tube should be fitted to the spigots on the underside of the heater using the blue connector and hose clips provided.

A 1 metre length of combustion air pipe is provided, which is also fitted with an end cap. This should be attached to the heater with the hose clip provided and pointed in the same direction as the flue pipe.

A "P" clip is provided for fixing the end of the pipe to the underside of the vehicle with the end cap slightly protruding under the sill or bumper and pointing towards the rear of the vehicle.

These pipes **must not** be cut shorter than the supplied lengths. They may be extended to a maximum length of up to 2 metres if required.

**Note:** The combustion air pipe can be terminated underneath the vehicle making sure the end of it is at least 0.5 metres away from the end of the exhaust and that they are not pointing directly at each other. Take care to ensure that both pipes have a slight downward slope to prevent any possibility of water traps. Make sure that neither the flue or the combustion air inlet pipe are terminated in an under-floor box section.

- g) The flue terminals are not to be positioned within 500 mm of a refuelling point or fuel tank breather outlet or any ventilator from the fuel system(s). The flue terminals are not to be located within 300 mm of a ventilator for the living space or an opening part of a window. Where the flue terminal is positioned vertically below an opening part of a window, the appliance must be fitted with an automatic shut-off device to prevent operation when the window is open.

### GAS CONNECTION

- a) The heater uses an 8mm (5/16") gas connection but can be fitted with an adaptor to take 1/4" copper pipe if preferred.
- b) The gas supply should be connected with copper gas pipe with an isolating valve and all connections made with brass compression fittings, fitted with copper olives.

When the gas line is complete all joints should be tested for leaks using leak

- c) detection solution - **NEVER WITH A NAKED FLAME.**

- d) Gas pressure should be verified where the gas pipe connects to the heater using a low pressure gauge or "U" tube, any tests or connections should only be undertaken by a registered person (see item a) on page 2).

- e) NOTE. Net Heat Input: 2.9kw, average consumption 208 g/h.

### f) **Commissioning.**

Visually check the installation before attempting to run the heater to ensure it is installed correctly, paying particular attention to the flue. A functional check of its operation should be carried out.

## WIRING INSTRUCTIONS



- a) The Heatsource HS2800 heater is supplied with 2 wiring looms, a 2 core (red and black) and a 6 core, both are fitted with terminals and housings to plug into the main PCB positioned under the removable electronics cover on the heater. The connectors on the PCB are marked CN24 (power) and CN26 & 27 (switches). Grommets are fitted to the looms which should slide into the slots above the air inlet.
- b) Find a suitable location for the thermostat between waist and shoulder height. Make sure that it is not mounted in an area with poor air circulation or in an area with above average heat, such as above a cooker, refrigerator or in direct sunlight.
- c) When you have chosen the location, drill a pilot hole in the area you expect to retrieve the 6 core cable. If the clearance is OK, open the pilot hole out to 20mm.
- d) Remove the two blanking plugs from their transit posts on the rear of the thermostat.
- e) Push the connector on the rear of the thermostat through the hole and fix the thermostat into position using the two screws provided. Once happy with the installation cover the holes with the blanking plugs.
- f) Take the 6 core loom from the heater and connect to the plug on the rear of the thermostat ensuring that the latches are mating correctly.

- g) If access to the rear of your panel is limited then pull the cable end from the heater through your previously drilled hole and make the connections before pushing it back through the hole, you may find you need to drill a 25mm hole if using this method.
- h) Run the 2 core cable to a convenient DC supply (usually at the battery) and connect using the fuse holder supplied. Check battery is 12v. Refer to data label for heater voltage. Insert the 5 amp fuse and test.


Ensure ALL electrical connections are completed before connecting to supply.

## OPERATION


**Before use:** Pay particular attention to the exhaust outlet and combustion air inlets to check that neither have been blocked or damaged.

- a) Check the gas supply is turned on and that the battery voltage is correct. Minimum operating voltage is 10v and max. operating voltage is 15v (for 12v heaters) when measured at the heater.
- b) Rotate the thermostat temperature dial fully anti-clockwise and put the 3 position knob to the flame position.
- c) Rotate the temperature dial until the fan starts. There will be a pre-purge pause of approx 20 seconds to allow any un-burnt gas to leave the flue. A green LED will illuminate after successful flame ignition.
- d) If there is air in the line it may take a few attempts for the gas to ignite. See page 7 for gas lockout resetting. If ignition is not satisfactory the red LED will flash, refer to the trouble shooting guide page 7.
- e) Find the desired temperature setting by adjusting the dial on the thermostat. The heater will then cycle on and off to maintain that temperature.
- f) When the set temperature is reached the green light will go out and the heater will start its post purge cycle.
- g) If the 3 position knob is in the fan position the green LED will illuminate and the fan will blow cold air continuously.

Sequence of operation:

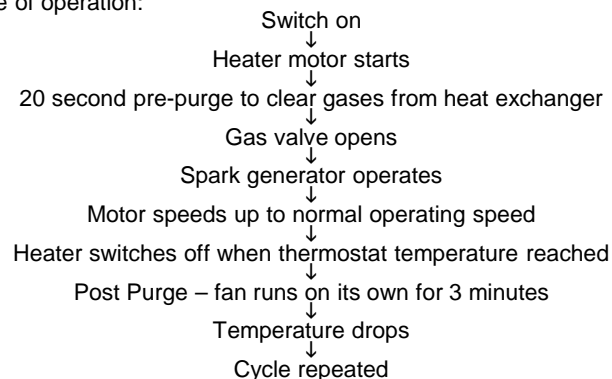

- l) Where the open end of the exhaust flue terminates, three sides of the under-floor space are to be kept open and not obstructed, and not contain through floor ventilation openings.
- m) The heater must not be used when the vehicle is in motion unless fitted with the relevant flue terminal.
- n) Observe all warnings.  
In the unlikely event of leaks in the gas system, or if there is a smell of gas:
  - Extinguish all naked flames
  - Do not smoke
  - Do not operate any electrical switches
  - Shut off gas connection
  - Turn off all gas appliances
  - Open windows and doors for ventilation
 Get the system thoroughly checked by a registered gas engineer.
- o) Suitable for use on boats when supplied with correct flue terminal.

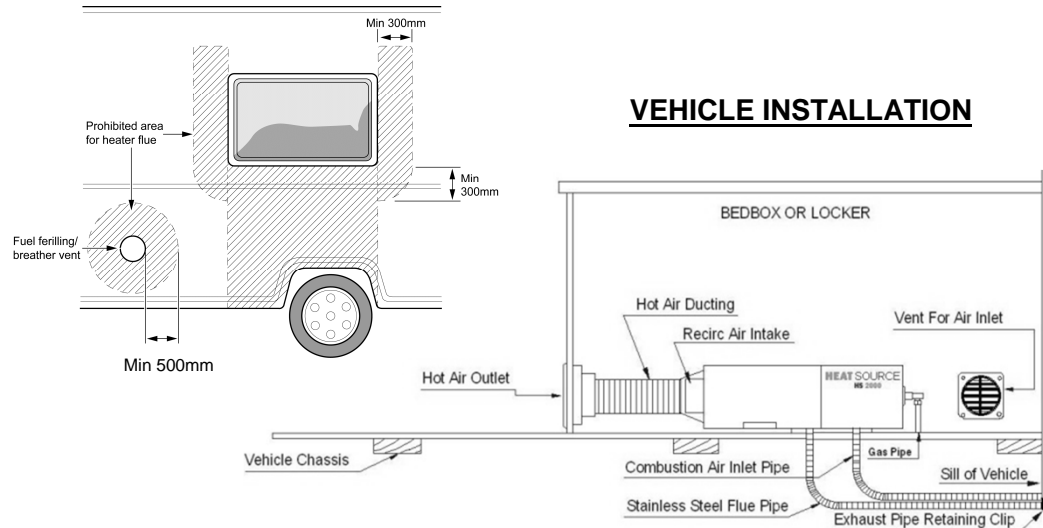

## VEHICLE INSTALLATION

### FITTING THE HEATER

- a) Find a suitable location which allows access to the heater with suitable room for service and inspection, usually in a bed-box or locker. The Heatsource HS2800 should be fitted in an area allowing a minimum distance of 25mm from adjacent walls, ceiling or shelves from the main body of the heater. Check that there are no chassis members underneath the location of the exhaust and combustion air spigots.
- b) Using the template provided, drill a 3mm pilot hole through the exhaust and combustion air spigot centres. Examine underneath the vehicle to check that there is adequate clearance for a 40mm hole saw. Cut away any carpet or matting around the exhaust and open out the holes to 40mm. Ensure that three sides of the underfloor space are kept open and are not obstructed.
- c) Loosen the 4 x M4 screws on the base of the heater and slot the mounting brackets into position, then re-tighten the screws. Mount the heater in position and mark the 4 mounting holes on the floor of the vehicle for screwing the heater down. Remove the heater and drill 4 x 3.5mm holes in the marked positions, then screw the heater in place with the 3/4 x No.8 self tapping screws provided.